



P1 Series Monopoint Installation Instructions

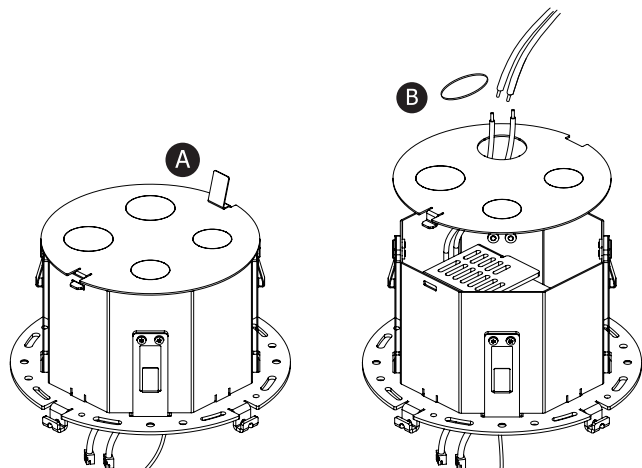

Step 1

Push to release (A) the box cover, remove the knockout (B), and pull the power lines through. Complete the internal wiring and close the cover.


Note: Ceiling thickness range is 1/2" (12.7 mm) to 2" (50.8 mm).

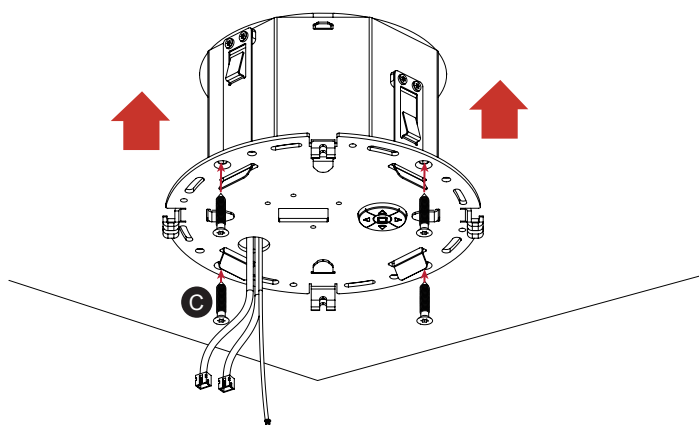

Step 2


Ensure a 5" ceiling hole is ready. Push the box into the pre-drilled 5" ceiling hole. Integrated latches will catch to prevent it from falling. Secure permanently with 4 screws (not included) (C).

Note: Ceiling hole diameter range is 4-15/16" (126 mm) to 5-1/16" (128 mm). Built-in latches hold components during installation for hands-free safety.

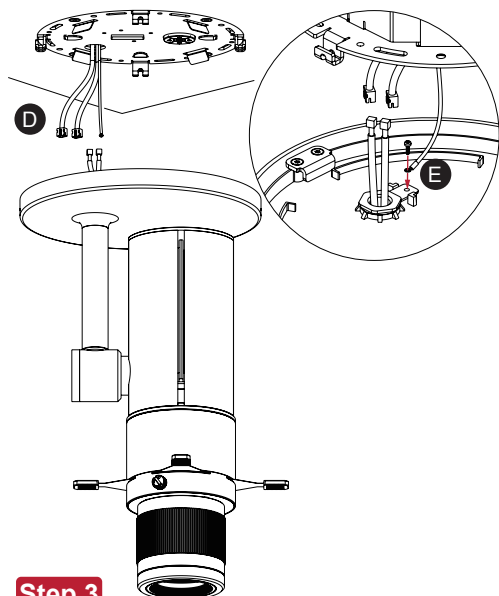


Step 3

Connect the fixture wire harness to the box (D). Secure the ground wire's O-ring terminal to the metal plate on the fixture side using the pre-installed screw (E). If configuring CCT, INT, Mode, or Address, safely restore power temporarily to adjust settings.

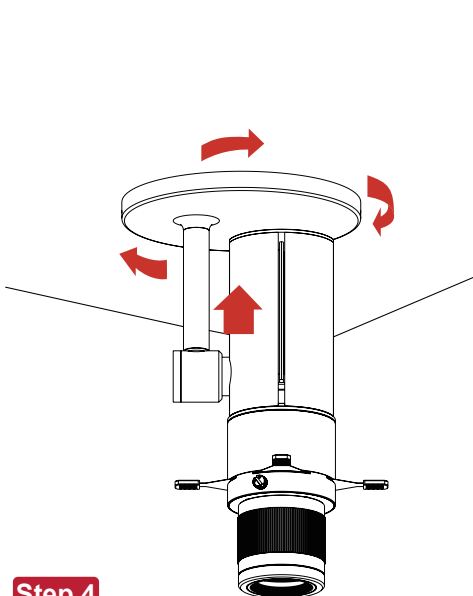

Step 4

Align the fixture with the box. Push up and rotate clockwise until it snaps into the safety latches. It will now hang without manual support.

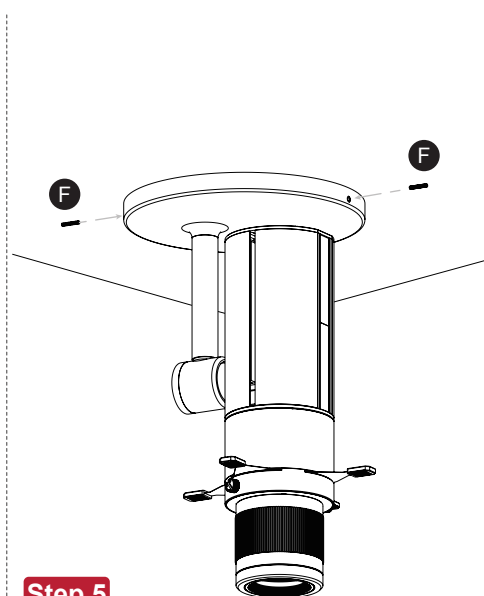

Step 5

Tighten the two integrated Set Screws (F) on the side to lock the fixture flush against the base.