






K40 Flush Truss Clamp

Quick Start Guide

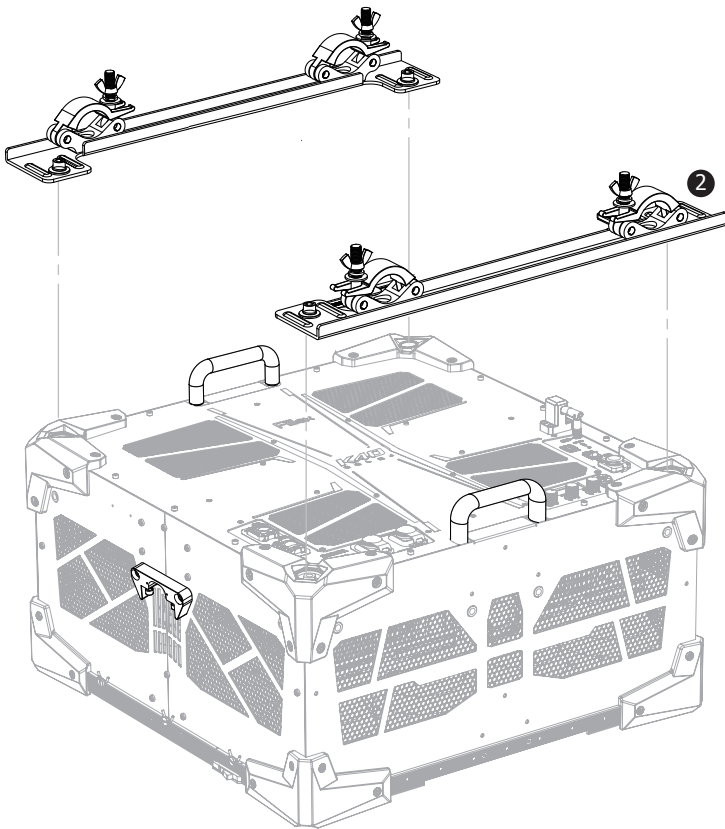



- ❶ Remove the yoke from K40 Color.
- ❷ Ensure the Flush Truss Clamp is parallel to the K40 Color.
- ❸ Hand-tighten the four corner screws clockwise using a 5/16 inch allen wrench.

*To dismantle, reverse these steps.

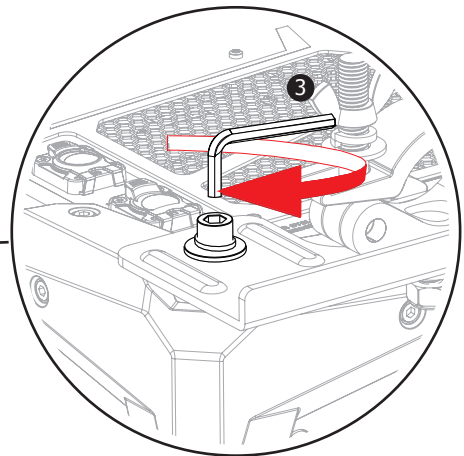
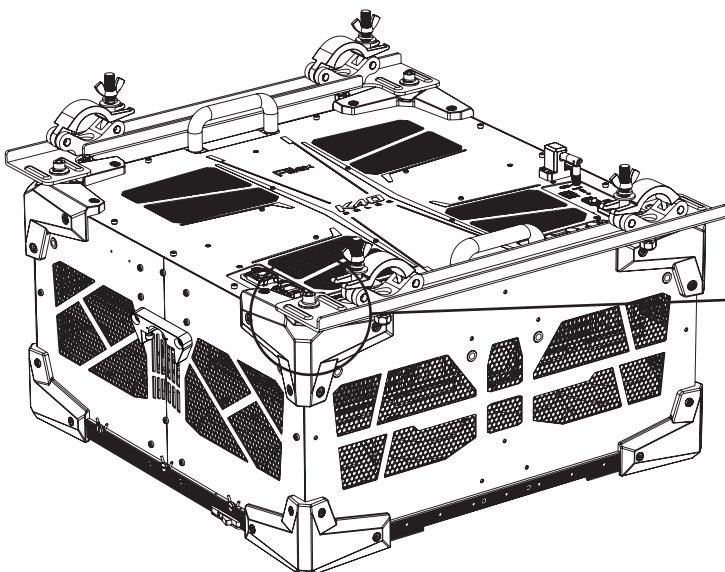


081525A

Vertical Rod Arrangement

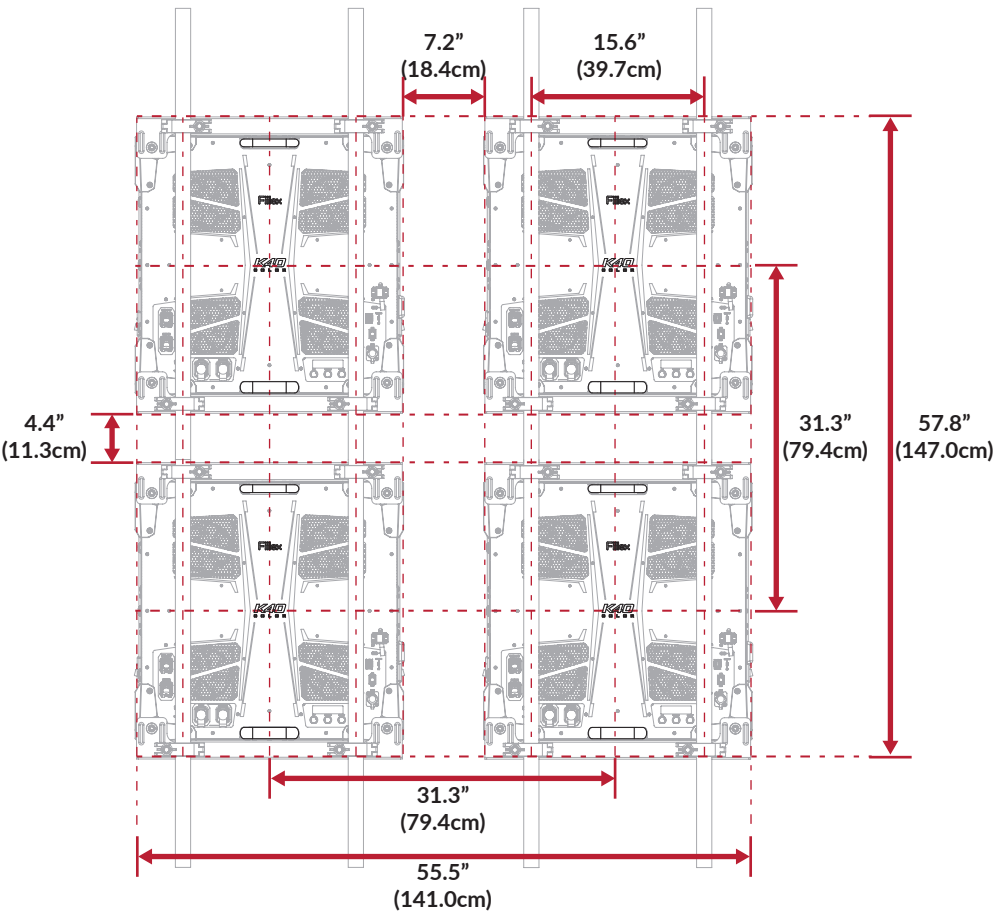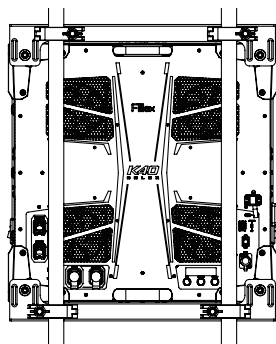

Horizontal Rod Arrangement

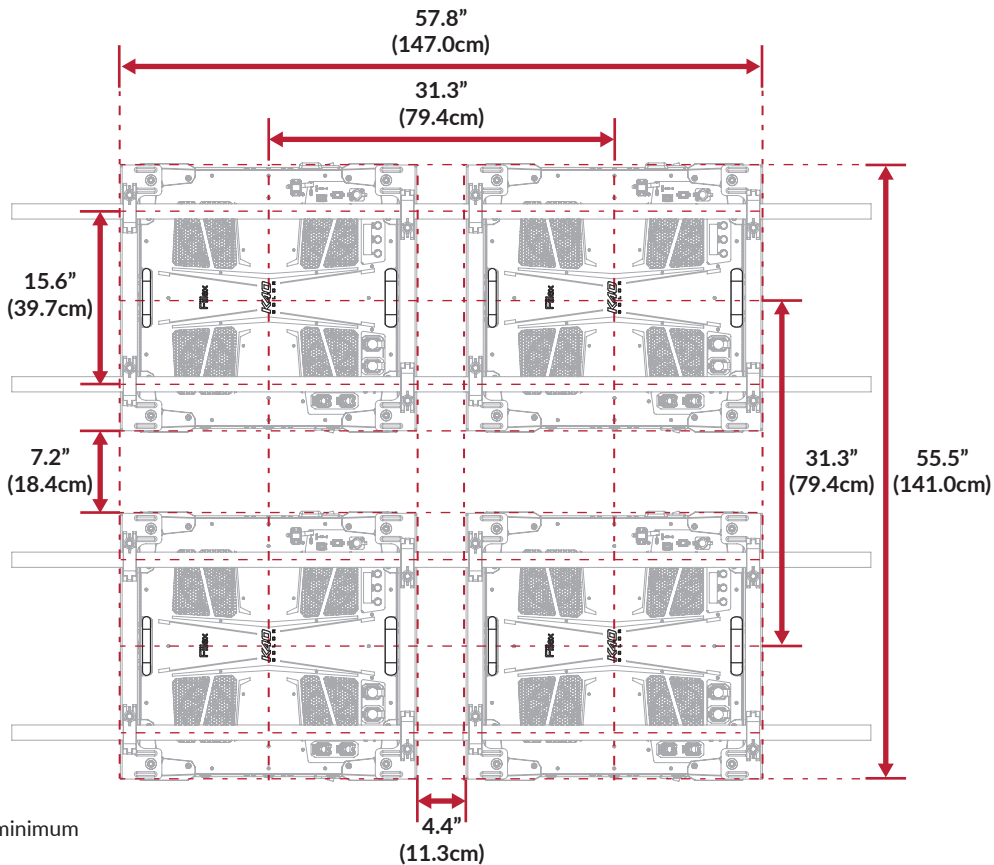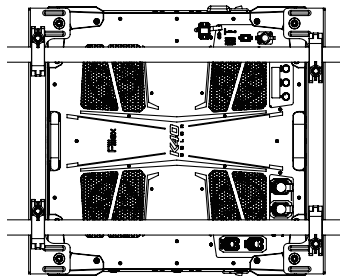

*The dimensions shown above represent the minimum clearance requirements for safe installation.